

User Manual

Thanks for choosing DOOGEE products

Get Started

Thank you for choosing DOOGEE smart phones. In order to keep your phone in the best working condition, please read this user manual carefully before using it.

File Transfer

·PC-Phone File Transfer

Once the phone is connected to a PC with USB, the PC will charge the mobile phone automatically.

- Drag the notification panel down and tap "USB charging this device";
- 2. Select "Transfer files":
- The device is recognized as a removable disk by the computer. Open the folder appeared on the computer and transfer files from your phone to PC and vice-versa.

Use USB to
Charge this device Just charge this device
O Transfer files Transfer files to another device
O Transfer photos (PTP) Transfer photos or files if MTP is not supported (PTP)
O Use device as MIDI Use this device as MIDI
CANCEL

Keys and Parts

The phone includes many parts, Camera, Flash Light, Receiver, USB jack, Volume key, Power key etc, refer to the below diagram for more using details.

Keys	Directions		
1. Volume Up/Down Key	Press the upper key to raise the volume and press the lower key to reduce the volume.		
2. Power Key	Press: lock or wake up the screen. Press and hold for 2s: turn on/off the phone.		
3. Receiver	To hear the sound of the other side when calling.		
4.Front Camera	To take selfie or object facing to the phone screen.		
5. Headset Interface	To connect an earphone to listen to music or radio, etc		
6. Return Key	Return to the previous page.		
7. Menu Key	Switch to recently used applications.		
8. Home Key	Press: return to the home screen from any other interface.		
9. USB Interface	To connect charger or USB cable to transfer data.		
10. Rear Camera	To take photo.		
11. Flash Light	Assistant the camera to take photo in low light condition.		
12. Speaker	Work when the phone rings, plays music or hands-free call.		
13. Microphone	To make sounds louder or record them.		

Lock and Unlock the Screen

· Lock the Screen

Press the "Power" key to lock the screen. The screen shall be automatically locked after it's not used for a while.

· Unlock the Screen

- 1. Press the "Power" key to light up the screen
- 2. Swipe up from the bottom of the screen to unlock the screen.

· Change Screen Lock

- 1. On the home screen, select
- "Settings" > "Security" > "Screen lock".
- 2. Choose the screen lock method.



Notification Panel

Notification icons on the status bar report the new arrival of messages, calendar events, alarm etc. You can switch on Data connection, WLAN, Bluetooth and so on.

Icons	Descriptions	Icons	Descriptions
	Battery	2000000 2000000 200000 20000 20000	Mobile Data
*	Wi-Fi	*	Bluetooth
	Airplane Mode	T	Flashlight
0	Location		Auto-rotate
0	Do not Disturb	©	Eye Protection

Change Wallpaper

Three ways to set up personalized wallpaper:

- 1. Press and hold any empty space on the screen, select "Wallpaper".
- 2. Click "Settings" > "Display" > "Wallpaper" > select a picture > "Apply".
- 3. "Gallery" > choose a photo > "Set picture as" > "Wallpaper".

Make a Call

- · Make a Call Directly
- 1. On the home screen, touch the icon "Phone" to display the dialing keypad.
- 2. Touch the numeric buttons to input the telephone number and click the icon (to make a call.
- · Make a Call From Contacts

On the home screen, touch "Contacts" to select the one you want to call, and then tap the phone number to make a call.

· Make a Call From Call Logs

On the home screen, touch "Phone" > " (1)", select a call from call logs and click it to make a call.

Note:

If you have inserted two SIM cards to the phone, there will be two call icons on the dialing interface. Choose SIM 1 or SIM 2 to make a call.

Reject a Call by Sending a Busy Message

When you are inconvenient to answer an incoming call, you can send a busy message for rejecting it.

- 1. On the incoming call interface, drag the message icon up to show the obtained system busy messages.
- 2. Tap one of them to send out and then the call will be rejected.

Add a Contact

- 1. Enter "Contacts" on the desktop, touch the " (2) ", select the storage location.
- 2. Fill the new contact information and save.

Messaging

· Send a New Message

Enter "Messaging" > click the icon "+" > type the text and phone number of the receiver > send it.

· Receive a New Message

When there is a new message comes, an icon will appear in the notification bar to notify you. Slide the status bar down to click the notification and read it. Or go to "Messaging", read the new message directly.

· Editing SMS and MMS

1. You can compose a new SMS by cutting or copying text. Step:

Press and hold a text field > select copy or cut > press and hold the empty space of new message typing area > choose paste.

Note:

The selected content is highlighted in Green.

2. A MMS may contain video, picture, audio etc.

Step:

Enter the new message typing interface > tap "Attach" > select Pictures, Videos, Audio, or Slideshow > choose corresponding file > type the text and phone number of the receiver > send it.

Browser

- · Open Browser
- 1. On the home screen, touch "Browser".
- 2. Touch the input field at the top of the screen to input a website address.
- 3. Tap the icon" 🖏"

· Browser Options

When browsing a web page, you can slide to scroll the screen to view other parts of the web page.

- Touch the icon (**!**), select "Save to bookmarks" to add the current web page as a bookmark.
- Touch the icon (]), select "Bookmarks/History" to open the saved bookmarks or pages you've browsed.
- Touch the icon (I), select "Share page" to share the website with others.

· Browser Settings

On the browser interface, touch the icon (\blacksquare), select "Settings" to operate setting according to the indication.

Note:

You must have a mobile data or Wi-Fi connection to access the Internet.

Enjoy Music

You can listen to the music saved in your phone through a music player.

When you copy music files to your phone, the music player searches the device for the files and builds a catalog of your music.

Download Applications From Play Store

Steps to down an APP on the Play Store:

Enter the "Play Store" > login a Google™ account > search for the APP and download.

Manage Applications

Enter "Settings" > "Apps". Tap any application to view the information, and also you can force the app to stop working or uninstall it.

Maintenance and Safety

Please read this safety information carefully so that you can use your phone in safe condition:

1. @ Around children

Please be very careful with children and your phone. A mobile phone contains a number of detachable parts, while swallowing these little parts may cause asphyxiation.

2. 🗫 Hearing damage

Prolonged listening at very high volume may damage your hearing. Please reduce the volume to the lowest possible level when listening to music or having a call.

3. A Fire hazard

Do not leave your phone near heat sources such as radiators or cookers. Do not leave your phone charging near flammable materials as there is a risk of fire.

4. 🖨 At a gas station

Do not use your phone at gas station. In fact, it's always best to turn it off whenever you're near fuels, chemicals or explosives.

5. 6 Contact with liquid

Do not expose the phone to liquid or touch it with wet hands, since damage caused by water may be irreparable.

6. 1 Do not destroy the battery and charger

Never use a battery or charger that has been damaged. Keep the battery away from magnetic objects as the latter might cause short-circuit of your battery and destroy it permanently. As a general rule, you should not expose the battery to very high or low temperature (below 0°Cor above 45°C). Differences in temperature may reduce service life.

7. [Shocks and impact

Protect your phone from shock and impact. Some parts of the phone are made from glass and might break if the phone is dropped or is subject to severe impact. Avoid dropping the phone and touching the screen with sharp objects.


8. A Maintenance

 
Do not try to disassemble your phone as there is a risk of electric shock. If you want to clean your handset, please use a dry cloth (do not use a solvent, such as benzene or alcohol).

9. 1 Temperature


Do not use the phone in the environment at too high or too low temperature, never expose the mobile phone to burning sun or totally wet surrounding. The suitable temperature for the phone is 0°C to 45°C.

▲ Overview

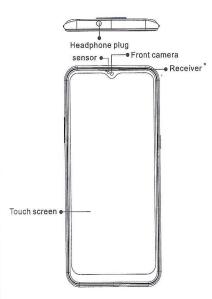



Overview

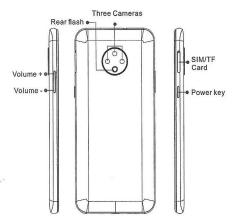

▲ Battery

The phone includes a bulit-in battery.

You can track your battery status with the icon showed on the top right of the screen.



Warning

. Use only DOOGEE-approved batteries specifically designed for your phone. Incompatible batteries can cause serious injury or damage to your phone.

Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.

▲ Accessories





Charger

 
USB Cable

▲ Correct card installation

You can install two Nano SIM cards or one Nano SIM card and one TF card.

How to insert SIM card:

- 1. Ensure the device is power off;
- Utilize the SIM card pin to unlock the SIM card tray by inserting it into the provided slot.
- 3.Insert the Nano SIM card or TF Card into the SIM card tray.
- 4. Insert the SIM card tray, lock it to the place.



Caution:

Only Nano SIM card or TF card is supported by this device.Don't modify or alter your SIM card.

▲ Описание



