 


DATA FROG®
Y3 ARCADE™
WITH M8 TV STICK

USER MANUAL

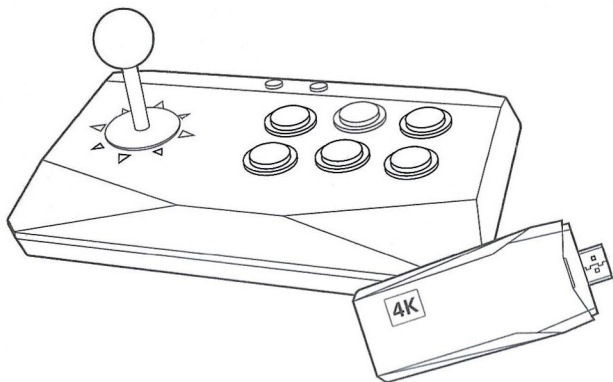


PLEASE CAREFULLY READ THE OPERATIONS MANUAL COMPLETELY BEFORE USING THIS ACCESSORY. THIS MANUAL CONTAINS IMPORTANT HEALTH AND SAFETY INFORMATION. SEE THE OPERATIONS MANUAL FOR COMPLETE INSTRUCTIONS.

WARNING- Battery Leakage

Leakage of battery fluid can cause personal injury as well as damage to your remote. If battery leakage occurs, thoroughly wash the affected skin and clothes. Keep battery fluid away from your eyes and mouth. Leaking batteries may make popping sounds. To avoid battery leakage:

- Do not mix used and new batteries (replace all batteries at the same time).
- Do not mix different brands of batteries.
- Nintendo recommends alkaline batteries.
- Do not use Lithium ion, nickel cadmium (nicad), or carbon zinc batteries.
- Do not leave batteries in the machine for long periods of non-use.
- Do not recharge alkaline or non-rechargeable batteries.
- Do not put the batteries in backwards. Make sure that the positive (+) and negative (-) ends are facing in the correct directions. Insert the negative end first. When removing batteries, remove the positive end first.
- Do not use damaged, deformed or leaking batteries.
- Do not dispose of batteries in a fire.

1 Y3 Arcade Key Function

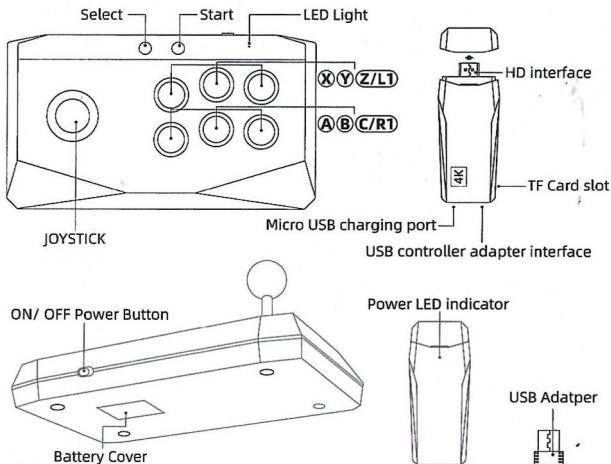

2 Setting Up the Game Console

2.1. Start by turning on your TV and inserting the game stick into the HDMI port.

(Note: If there's a Wi-Fi transmitter near your TV, use the provided HD extension cable to connect the TV. Then, insert the game stick into the extension cable. Place it in front of the TV to avoid Wi-Fi signal interference!)

2.2. Next, connect the power cable. Use the provided charging cable to connect the game stick to the TV.



(Note: If your TV's USB port doesn't provide power, you can use your phone charger. Ensure the charger has an output of 5V/1A.)

2.3. Go to your TV's signal settings and choose the "HDMI" signal source. Wait for 3-5 seconds for the screen to synchronize.

2.4.Setting Up Y3 Arcade Stick

2.4.1. The Y3 Arcade requires AA batteries. We recommend high-quality alkaline batteries for optimal performance and longer battery life. If using rechargeable nickel-metal hydride (NiMH) batteries, follow the manufacturer's safety guidelines and usage instructions.

2.4.2. Flip the power button to the "ON" position to activate the Y3 Arcade, allowing it to scan for signals.

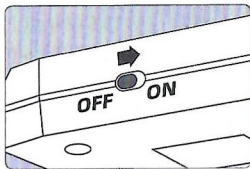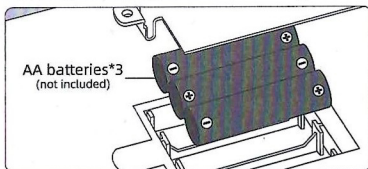


2.4.3. The LED indicator will show a solid green light upon successful signal connection.

Note:

If the TV screen fails to synchronize, please check the following:

1. Ensure that the console's indicator light is in blue. If not, there is no power. Please check the power cable is connected well.
2. Verify that the TV's HDMI channel is selected correctly. Try switching to other channels to check for synchronization.
3. Confirm whether the game stick has a TF (microSD) card inserted. If not, please insert one.

3 Home Menu Instructions

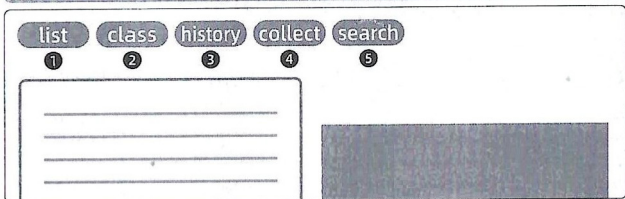

3.1 List: Displays a list of tested games.

3.2 Class: Provides an emulator list, including MAME/FC/GB/GBA/GBC/MD/SFC/PS1/Atari.

3.3 History: Records the most recently played games.

 
3.4 Collect: Your favorite games.

3.5 Search: Enables game name search, supporting only English alphabet search.

3.6 Settings: On the home page, press "SELECT" to access the secondary menu. In the secondary menu, Options will be Language, Keypad Tone Settings, View Local Files (to play downloaded game ROMs), Factory Settings, System Information, and Exit Settings.


Note:

Press "R1" and "L1" to control the home page.

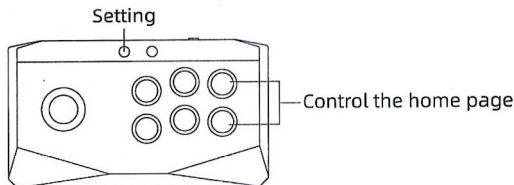

4 Change Language

 4.1. On the home page, press "SELECT" to access the secondary menu "SETTINGS."

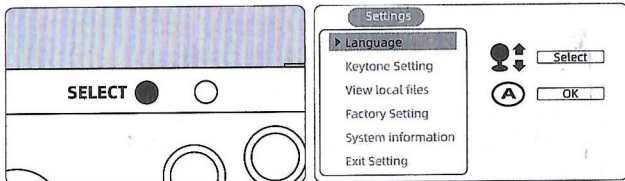


4.2. Within the Language option, choose your preferred language. Press the "A" button to confirm, press the "B" button to exit to the "Settings" page, then press "B" again to return to the main page.

Language Settings

简体中文	☐
繁体中文	☐
English	☐
日本語	☐
한국어	☐
Русский	☐
Deutsch	☐
Italiano	☐
Español	☐
Português	☐


5 How to Enter/Exit

 - 5.1. From the menu page, choose the desired game and press the "A" button to enter the game.
- 5.2. While on the game list page, press the "B" button to return to the home menu.
- 5.3. During gameplay, simultaneously press the "SELECT" and "START" buttons to open the in-game menu. Within the menu, select "Quit Game" and press "A" to exit, returning to the menu page.

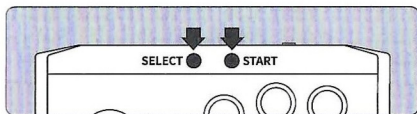

6 How to download games

 - 6.1. Download game rows into your computer

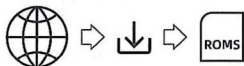


- 6.2. Use the card ready connect the TF card into your computer.



- 6.3 Now copy your game roms into the "Roms" file, and back to the M8 console.



 - 6.3. Press "Select" button in the main menu, enter the "Setting" page, and select "View Local files", and then all the roms are there.

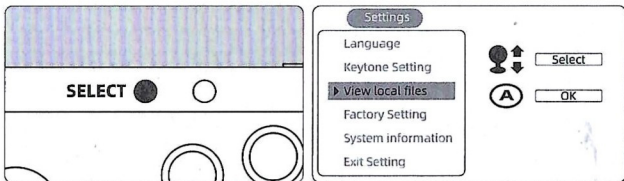

7 Y3 Arcade Stick Is Not Responding

Please check the following for any abnormalities:

7.1. Are batteries properly installed in the arcade stick?

7.2. Is the USB signal adapter securely inserted?

7.3. Are the indicator lights on the controller illuminated?

※ We conduct rigorous arcade stick testing before shipment to ensure their quality and functionality. Unless the controller has been mishandled during transportation, we recommend troubleshooting the aforementioned issues before contacting us for a replacement. Doing so will save you time and help resolve any potential problems efficiently.

8 Statement

8.1 This establishment solely provides game testing services. We value copyright protection and support legitimate gaming. Prior to using our testing services, please ensure that you possess a legal copy of the game or have obtained the necessary authorization. Any unauthorized copying of games or copyright infringement is unrelated to this establishment. In the event that users are found to have failed to promptly delete game copies or engage in copyright infringement after testing, this establishment reserves the right to immediately terminate the user's testing privileges and may pursue legal action.

8.2 If there are any changes regarding the product's content or specifications, please refer to the current product as the accurate information, unless otherwise notified through an official announcement or update.