 


CAPPUCCINO CREAM

Libretto
Istruzioni **IT**

Instruction
Booklet **EN**

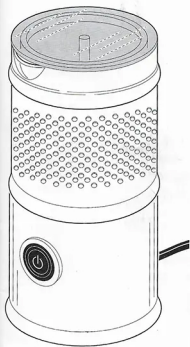

DEVISIB®

A - USAGE WARNINGS

Meaning of the warnings in the booklet



DANGER: Indicates an imminently hazardous situation which, if not avoided, could result in serious injury or even death. The use of this term is limited to the most extreme situations.



ATTENTION: Indicates a potentially hazardous situation which, if not avoided, could result in serious injury (and, in extreme cases, death).



WARNING: Indicates a potentially hazardous situation which, if not avoided, may result in minor personal injury or damage to the appliance. It also alerts the user to incorrect operating procedures.



Essential safety warnings before use



- Carefully read the instructions in this manual because they provide important information about the safe installation, use and maintenance.



Keep this manual for future reference.

- Check the mechanical integrity of the appliance before each use.

The motor base (1), container (2) and cover (3) must not be broken or cracked.

The insulation and plug of the power cord must not be cracked or broken. In the event of the above, immediately disconnect the plug from the wall socket and take the appliance to an authorized service centre for the necessary checks.

- Do not leave packaging materials (plastic bags, styrofoam, boxes, etc.) within reach of children or persons with reduced physical, sensory or mental faculties because they are potentially dangerous.



This appliance can be used by children age 8 and above and by persons with reduced physical, sensory or mental faculties as well as people without sufficient experience or knowledge of it ONLY if supervised by a person responsible for their safety or if instructed



in the safe use of the appliance and aware of the possible risks from improper use.



Children should not use the appliance as a toy and should not clean or use the appliance unless they are older than age 8 and are assisted by an adult.



Keep the appliance and power cord away from children under age 8.

- Before plugging in the appliance make sure that the specifications of the electric mains match those shown on the nameplate. The nameplate is on the bottom of the motor base.
- For your own safety, we recommend that the appliance be powered through a differential circuit breaker (RCD) with tripping current no greater than 30 mA.
- If the plug is not compatible with the wall socket, have the former replaced with another of a suitable type by a qualified professional. In particular, this person must also check that the wiring of the wall socket is suitable for the power absorbed by the appliance.

In general, the use of adapters, power strips and/or extension cords is discouraged. If their use is absolutely necessary, use only single or multiple adapters and extension cords that comply with current safety standards, taking care not to exceed the current-carrying capacity marked on single adapters or extension cords and the maximum power capacity marked on multiple adapters.

- Using any electrical appliance requires following some fundamental rules. In particular:
 - do not touch the appliance with wet or damp hands;
 - do not use the appliance when barefoot;
 - do not pull the power cord, or the appliance, to disconnect the plug from the wall socket;
 - do not expose the appliance to the weather (sun, rain, etc.);
 - do not allow the appliance to be used by children or incompetent persons without supervision.
- In the event of breakdown and/or poor operation, turn off the appliance and do not tamper with it. For repairs, contact only a technical service centre authorized by the manufacturer and request the use of original replacement parts.

Failure to observe the above will compromise the safety of the appliance.

- If you decide to no longer use an appliance of this type, make it inoperable by cutting the power cable after disconnecting the plug from the wall socket.

In addition, make potentially dangerous parts harmless, especially for children who might play with the discarded appliance.



It must be installed following the manufacturer's instructions. Incorrect installation can cause injury to people and animals and property damage for which the manufacturer cannot be held liable.

- To prevent dangerous overheating, unwind the power cord to its full length and use the appliance as recommended in the section "USE".
- Do not leave the appliance plugged in when not in use. Remove the plug from the wall socket when the appliance is not being used.
- If the appliance's power cord is damaged, it must only be replaced by a service centre authorized by the manufacturer because special tools are required.



The electrical safety of this appliance can only be guaranteed if it is correctly connected to an efficient earthing system in accordance with current electrical safety standards.

- You should check this fundamental safety requirement and, in case of doubt, request a careful check of the system by a qualified professional.



The manufacturer will not be liable for any damage caused by a failure to earth the electrical system.

- Before carrying out any operation, turn off the appliance and remove the plug from the wall socket.
- Do not connect the appliance to the power supply through an external timer or remote control system.



Make sure that the power cord does not protrude from the surface the appliance stands on in order to avoid it being inadvertently pulled, and toppling the appliance.



Place the appliance on a horizontal and stable surface that is not delicate (such as lacquered furniture, tablecloths, etc.).

Make sure that the appliance is stably standing on the surface.



Place the appliance away from sinks and taps.



During operation, the wall socket must be easily accessible in case it is necessary to disconnect the appliance.

- Do not move the appliance when in use.
- Do not leave the appliance unattended during use.
- Do not expose the appliance to high temperatures and do not place it on hot surfaces such as a stove or cooktop.
- The appliance is **NOT** designed to be used in the rain and should **NOT** be stored outdoors or in damp places.
- Do not use the appliance outdoors.

Stables, stalls, barns, porches, gazebos, balconies or the like are considered to be outside, and therefore not allowed.

- When finished, always turn the appliance off and remove the plug from the wall socket.
- After each use, always thoroughly clean all parts in contact with food, following the instructions in the section «Cleaning».



Never immerse the motor base (1) in water or other liquids.

- The appliance has a safety switch (6) on the motor base

(1) that does not allow it to start if the container (2) is not correctly positioned.

Do not operate the appliance using the safety switch (6).

- Some surfaces are hot during use.
- Place the appliance in a secure place where no one can topple it or be injured.
- Do not place the appliance on hot surfaces or near a naked flame to avoid damaging it.



When dispensing the beverage, be careful not to splash hot liquid.

Do not touch the hot parts of the appliance immediately after use.

Danger of scalding  !

- Use only the container (2) to heat or froth milk. Do not place any other container on the motor base (1).
- Do not use the container (2) on the stove or in the oven (either traditional or microwave).
- Never operate the appliance empty.
- This appliance is only intended for home use.



It was not designed for other uses (which are excluded from the warranty) such as:

- staff refreshment break areas in shops; offices and other workplaces;
- farms;
- for guests in hotels, motels and other hospitality facilities;
- in bed and breakfasts and suchlike.



This appliance must only be used for the purpose for which it was expressly designed, which is to heat or froth milk.

Any other use is considered improper and therefore dangerous.

The manufacturer will not be liable for any damage caused by improper, incorrect or unreasonable use.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



- For repairs, contact only a technical service centre authorized by the manufacturer and request the use of original replacement parts. Failure to observe the above can compromise the proper operation of the appliance.
- Use the original packaging to store or transport the appliance.




In case of problems with the appliance, contact an authorized service centre.

Do not attempt to repair the appliance yourself. Repairs to the appliance made by unauthorized persons will automatically void the warranty even if its period of validity has still not expired.



B - TECHNICAL SPECIFICATIONS

- Power Supply:..... AC 220-240V~ 50Hz
- Power: 350W
- Max. container capacity:
 - heating..... 300 ml
 - milk cream 150 ml
- Container cold to the touch
- Automatic shut-off
- 3 functions:
 - hot milk cream
 - cold milk cream
 - warming milk
- Container removable and dishwasher safe

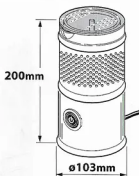

INFORMATION FOR USERS

Pursuant to Legislative Decree No. 49 of 14 March 2014, «Implementation of Directive 2012/19/EU on waste electrical and electronic equipment (WEEE)».



- The barred dumpster® symbol shown on the appliance indicates that the product must be collected separately from other waste at the end of its useful life.
- At the end of its useful life, the user must therefore deliver the appliance to an electronic and electrical waste collection centre, or return it to the reseller at the time of the purchase of a new appliance of the same type, in a ratio of one-to-one.
- The proper differentiated collection for the subsequent environmentally compatible recycling, treatment and disposal of abandoned appliances contributes to mitigating possible negative effects on the environment and our health and promotes the recycling of the materials that make up the appliance.
- Illegal disposal of the product by the user is subject to the administrative sanctions provided for by current law.

C - APPLIANCE DESCRIPTION

- 1) Motor base
- 2) Container
- 3) Cover
- 4) Frothing accessory
- 5) Mixing head
- 6) Safety switch
- 7) ON/OFF button with LED

Blue = cold and stand-by - Red = heating

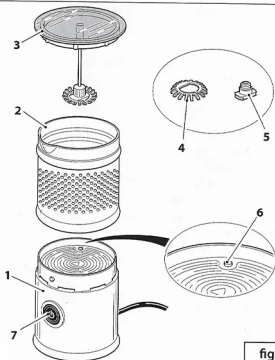


fig. "A"

D - USE

>> First use




Before first use, wash the appliance components (except the motor base) with warm water and regular dishwashing detergent (see «Cleaning”).
Rinse thoroughly and dry the components before using them.
Before use, check that the container is undamaged and not cracked.


>> Use

Attaching/removing the container

- Hold the motor base and turn the container counter-clockwise.
- Remove the container; you can easily clean it or fill it with milk.

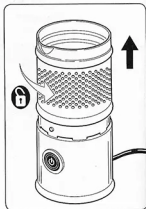

- Place the container on the motor base by inserting the guides in their seats.
- Turn the container clockwise to lock it: the spout of the container must be aligned with the ON/OFF switch.

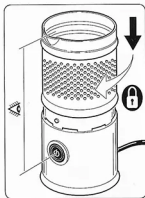

Preparation


- Completely unwind the power cord.
- Place the appliance on a flat, horizontal and stable surface away from sources of heat, taking care not to let the power cord touch hot surfaces or dangle from the surface on which it stands.
- Connect the plug to the wall socket making sure that the mains voltage corresponds to that indicated on the nameplate of the appliance.



- When the appliance is connected and the container is properly positioned, the blue LED flashes to indicate it is ready for use. After 10 seconds, the flashing stops to save energy. If, after use, you place the container on the base and the LED does not flash, it means the product is too hot and you need to wait until it cools a little before using it.
- If you press the ON/OFF switch without placing the container on the base, the LED flashes red/blue for about 10 seconds.


Mounting the frothing accessory (4)

- Insert the frothing accessory (4) on the pin (G) with the "whiskers" turned towards the cover.
- Push the frothing accessory (4) on the mixing head (5) until it locks.

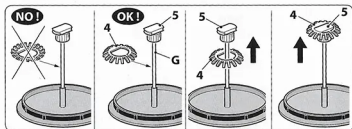


Warm milk with froth

- Fill the milk up to the "☐" mark (75 ml) for frothing 1 milk cup, or up to the "☐ ☐" mark (150 ml) for frothing 2 milk cups.
Take care not to overfill with milk to avoid the milk froth spilling out of the container.
- Position the frothing accessory (4) (see "Mounting the frothing accessory").
- Correctly position the cover (3) on the container.
The rubber gasket (X) must be fully inserted into the container.

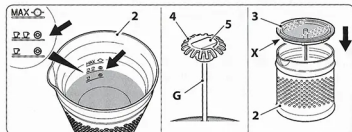


- Place the container on the base (see «attaching/removing the container”).
- Connect the plug to the wall socket, making sure that the mains voltage corresponds to that indicated on the appliance's nameplate.
- Press the ON/Off switch once. **The red LED lights up.** The milk is heated capped with froth.
- After about 2-3 minutes the appliance turns off automatically. The LED turns off.

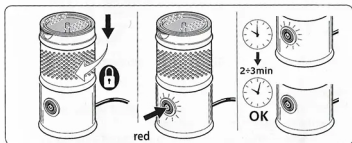

- Remove the power plug.
- Remove the container (2) from the base (1).
- Carefully remove the cover (3) from the container (2).
- Pour the frothed milk into a cup.

If necessary, use a spoon.

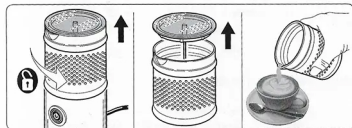



When the container is removed from the base, the heating plate is hot: take care not to touch it.




Cold milk with froth

- Proceed as described in "warm milk with froth".

The only difference:

- Press the ON/Off switch three times. **The blue LED lights up.** The milk is frothed without heating.
- After about 2 minutes the appliance turns off automatically. The LED turns off.

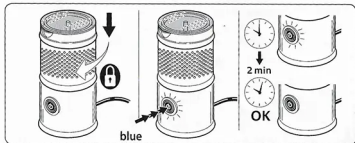


Warm milk (without froth)


- Fill the milk up to the upper MAX mark (300 ml).
Take care not to overfill with milk to avoid the milk froth spilling out of the container.

- Remove the frothing accessory (4) from the mixing head (5).
- Correctly position the cover (3) on the container.

The rubber gasket (X) must be fully inserted into the container.

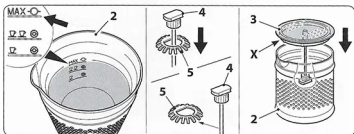


- Place the container on the base (see «attaching/removing the container”)
- Connect the plug to the wall socket, making sure that the mains voltage corresponds to that indicated on the appliance's nameplate.
- Press the ON/Off switch two times. **The red/blue LED lights up.** The milk is heated without froth.
- After about 2-3 minutes the appliance turns off automatically. The LED turns off.

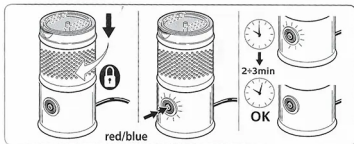

- Remove the power plug.

- Remove the container (2) from the base (1).
- Carefully remove the cover (3) from the container (2).
- Pour the milk into a cup.
If necessary, use a spoon.

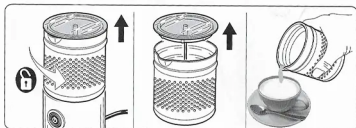

When the container is removed from the base, the heating plate is hot: take care not to touch it.



D - CLEANING AND MAINTENANCE



Before cleaning, **ALWAYS** turn off the appliance and remove the plug from the wall socket.



- To clean the motor base (1) use a damp cloth and avoid the use of abrasive detergents.



Do not wash it under running water and do not immerse in water or other liquids.




Never wash the motor base (1) in a dishwasher.



For hygiene, the appliance must be thoroughly cleaned after use to prevent the growth of bacteria.

- Remove the frothing accessory (4) from the mixing head (5).
- Turn the nut (F) clockwise.
- Remove the mixing head (5) by simply pulling it upwards.

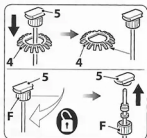

- The container (2), cover (3), frothing accessory (4) and head (5) can be washed with running water and mild dishwashing detergent.
- Alternatively, you can place the above parts in the dishwasher at low temperature (**maximum temperature 45 °C**).

Declaration of Conformity

The manufacturer declares under its sole responsibility that the appliance to which this «instruction booklet» refers complies with the provisions of the following Directives

- 2006/95/EC (LVD)
- 2004/108/EC (EMC)
- 2009/125/CE (ErP)
- 2011/65/EC (RoHS)
- 2001/95/EC (General Product Safety)
- 1935/2004/CE (Food compliance)
- 1907/2006/CE (REACH).