 
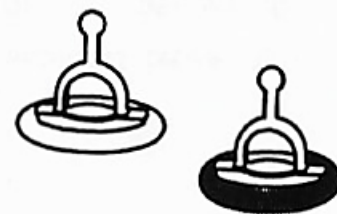 


Gustino

MILK FROTHER

BE-505

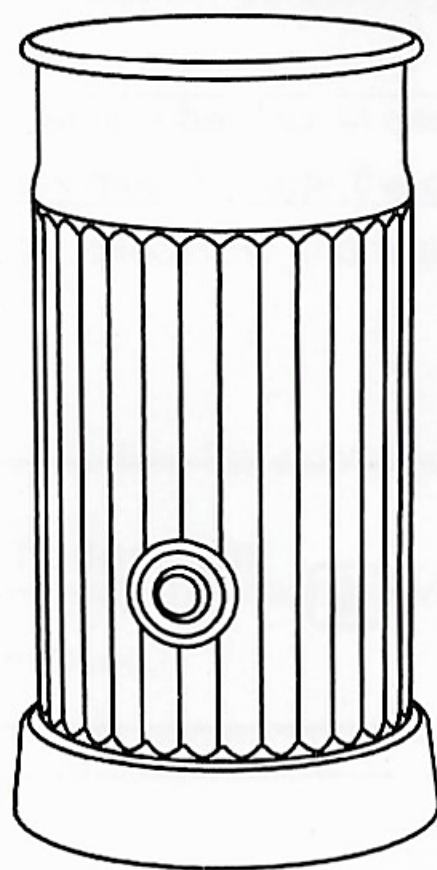

CONTENT

SAFETY PRECAUTIONS	2
DISPOSAL	3
INSTRUCTIONS OF USE	4
WASH	5
TROUBLESHOOTING	5
WARRANTY	6
SPECIFICATIONS	6



Caution:

When you see this sign, please refer to the safety precautions to avoid possible harm and damage.



Information:

When you see this sign, please take note of the advice for the correct and safe usage of your appliance.

SAFETY PRECAUTIONS



The instructions are part of the appliance. Read and follow all instructions to avoid possible harm and damage. Save these instructions and pass them on to any subsequent owner.

Avoid risk of fatal electric and fire

- Only plug the base into suitable, earthed mains connection. Make sure that the voltage of the power is the same as that specified on the rating plate.
- Do not pull the cable over sharp edges, clamp it or allow it to hang down. Keep the cable away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons.
- Disconnect the base from the mains, when not in use for long periods. Disconnect by pulling out the plug and not pulling the cable itself, as this may damage the cable.
- Never immerse the base in water. Electricity and water together risk a fatal electric shock.
- Jug is not dishwasher safe.
- Our product is non-watertight
- The connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is used again.
- The appliance is only to be used with the stand provided.
- The appliance must not be immersed.
- If an extension lead is required, only use an earthed cable with a conductor cross-section of at least 1.5mm².

Avoid possible harm when operating the appliance

- The appliance is intended to prepare beverages according to these instructions. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shop, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments. Do not use the appliance for other than intended use. No liability is accepted for any damage resulting from use for other purposes, faulty operation or amateur repairs. Guarantee services are also excluded in such cases.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the appliance if damaged. A damaged appliance can cause electric shock, burns and fire.
- To avoid hazard, never place the appliance on or beside hot surfaces, for example, radiators, cooking rings, gas burners or similar.
- Never clean the appliance in a dishwasher.
- Our product is non-watertight
- Only use the appliance with the base provided.

DISPOSAL



Your appliance contains materials which can be recovered or recycled. Separation of the remaining waste products into different types facilitates the recycling of raw materials.



You can obtain information on disposal from your local authority.



 
SAVE THESE INSTRUCTIONS

INSTRUCTIONS OF USE

1. Overview: ① Lid ② Start/stop Button ③ For hot and cold milk frother ④ For hot and cold milk ⑤ Base

2. Clean before the first use. Attach the relevant whisk.

- Fill milk frother up to one of the two <<max>> level.
- Place the lid on the machine. For a hot preparation, briefly press button to start, Button lights up red, take approx 70-80 sec. For cold milk frother, keep button pressed for approx 2 seconds, Button lights up blue, Takes approx. 60 sec. For a hot milk, briefly press button to start button lights up red. Take approx 70-90 sec. For a cold milk, briefly press button to start button lights up blue. Take approx. 60 sec.

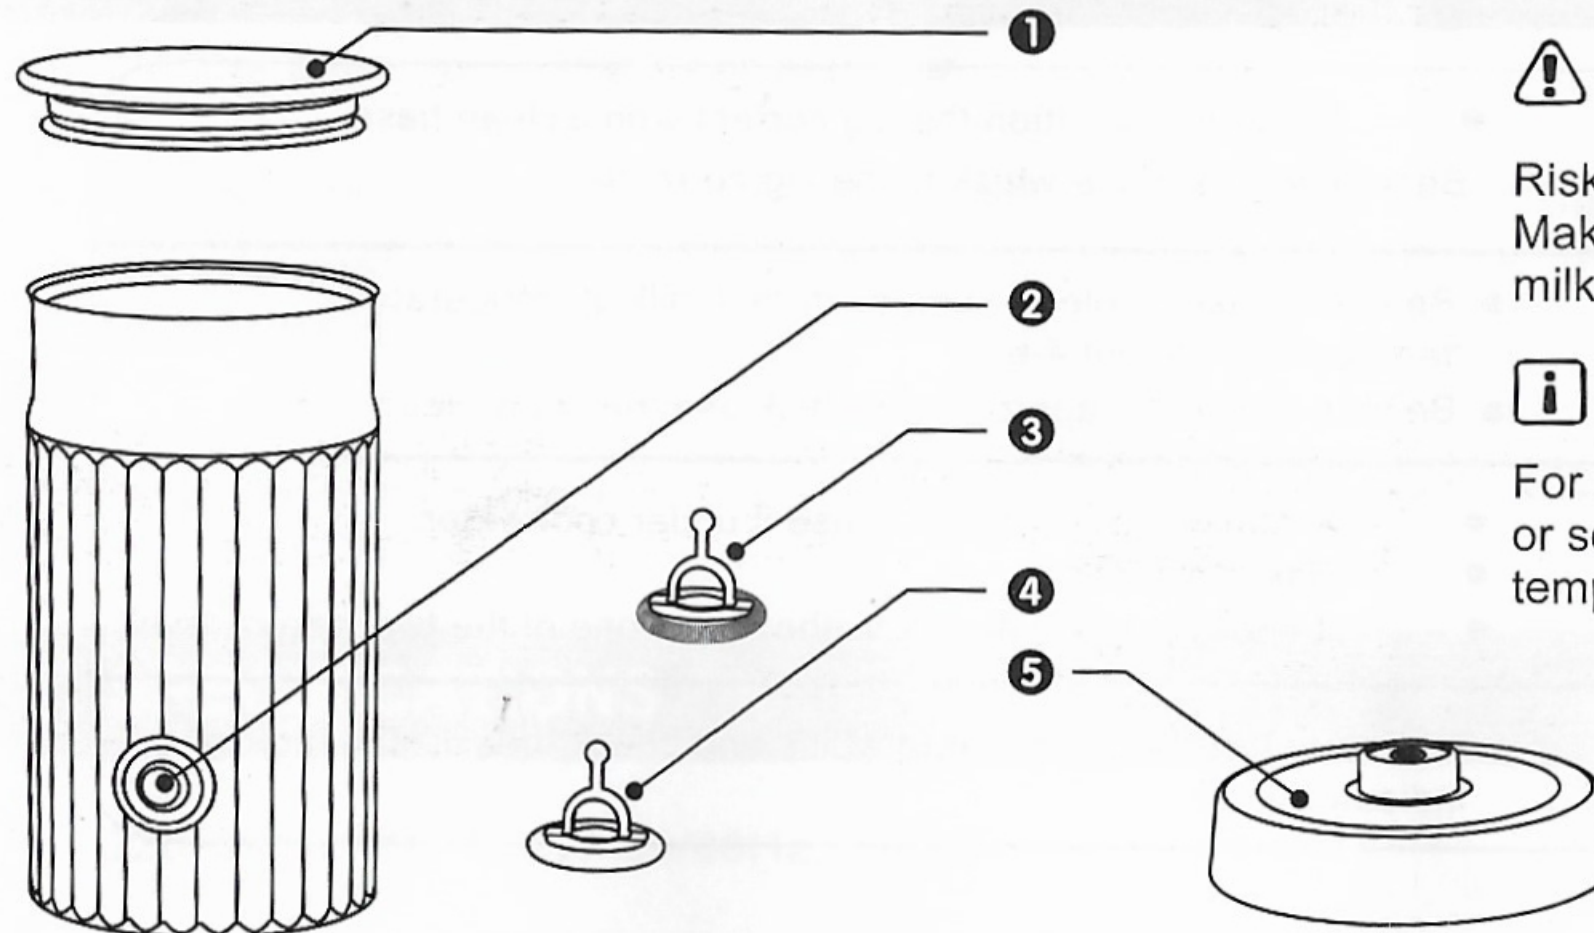

WARNING:

Risk of electrical shock and fire!
Make sure the under side of the
milk frother is dry.

TIP:

For optimal milk froth, use whole
or semi skimmed milk at refrigerated
temperature (about 4-6 °C).

WASH

Clean after each preparation. Only use non abrasive cloth, never use a brush. Jug is water proof. Do not put in dishwasher.

TROUBLESHOOTING

Machine dose not start	● Be sure to position the jug correctly on a clean base. ○ Be sure to attach the whisk to the jug correctly.
○ Quality of milk froth not up to standard	● Be sure to use whole or semi-skimmed milk at refrigerated temperature (about 4-6°C) ● Be sure to use the appropriate whisk and the jug is clean
3. Red Button blinking	● The appliance is too hot. Rinse it under cool water. ● Whisk is missing ● Not enough milk. Fill milk frother up to one of the two <max> level
~ Milk Overflows	○ Be sure to use the appropriate whisk and check the corresponding indicator level.

WARRANTY

This product against defects in materials and workmanship for a period of one years from the date of purchase. During this period, We will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products or repaired parts will be guaranteed for only the unexpired portion of the original warranty or six months, whichever is greater.

This limited warranty does not apply to any defect resulting from accident, misuse, improper maintenance, or normal wear and tear.

Except to the extent allowed by applicable law, the terms of this limited warranty do not exclude, restrict or modify, and are in addition to, the mandatory statutory rights applicable to the sale of the product to you.

SPECIFICATIONS

220~240V/110~120V, 50/60Hz, 500W

- Please Retain your purchase pocket and gift box which must be presented as proof of Date of Purchase if you wish to claim under the terms of the Guarantee.
- If the product has been 'ABUSED' or 'OPENED AND TAMPERED WITH' in any way, the Terms of the Guarantee are invalidated.