
About Time100

Time100 is the first internet watch brand in China. It conducts business through its own official website www.time100-watch.com and some other large and famous B2C online shops.

The brand positioning of time100 is "Time100 makes colorful Life". People should wear different watches at different times, on different occasions, and in different clothes. Changable styles of watches make time100 your solid choice for the fashion on your wrist.


Mainstream fashional design of Europe and America, world-class quality standard, online shopping without any intermediate links are three main advantages for time100 to offer customers the best cost-effective watches, which has been widely loved by numerous students, white collar and business people.

Operating instructions for mechanical watches

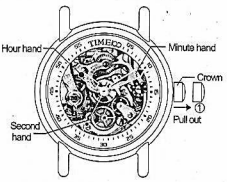

Set Time

1. Pull out the crown to the ① position.
2. Rotate the crown to set time
   • Synchronous movement of hour hand and minute hand for 24-hour
3. Push the crown back to its original position.

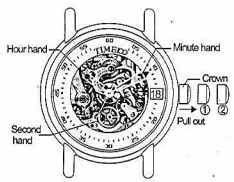


Set Time

1. Pull out the crown to the ② position.
2. Rotate the crown to set time.
   • Synchronous movement of hour hand and minute hand for 24-hour
3. Push the crown back to its original position.

Set Date

• Please don't set date during 21:00~01:00 (Date might not jump to the next day)
1. Pull out the crown to the ① position.
2. Rotate the crown to set date.
3. Push the crown back to its original position.

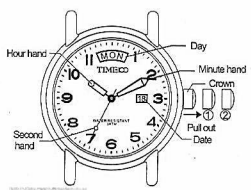


Set Time

1. Pull out the crown to the ② position.
2. Rotate the crown to set time.
   • Synchronous movement of hour hand and minute hand for 24-hour
3. Push the crown back to its original position.

Set Date and Day

• Please don't set date during 21:00~01:00 (Date might not jump to the next day)
1. Pull out the crown to the ① position.
2. Rotate the crown to set date.
3. Rotate the crown in the opposite direction to set day.
4. Push the crown back to its original position.

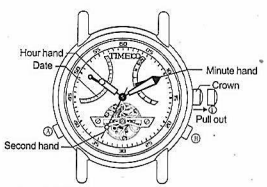


Set Time

1. Pull out the crown to the ① position.
2. Rotate the crown to set time.
   • Synchronous movement of hour hand and minute hand for 24-hour.
3. Push the crown back to its original position.

Set Day and Date


1. Press Ⓐ button to set date.
   • At the end of each month, the date will jump to the 1st of next month at the moment of 23:59.
2. Press Ⓑ button to set day.
   • At the end of each week, the day will jump to monday at the moment of 23:59.

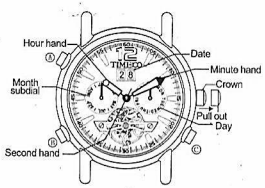

Set Time


1. Pull out the crown to the ① position.
2. Rotate the crown to set time.
   • Synchronous movement of hour hand and minute hand for 24-hour.
3. Push the crown back to its original position.

1. Press Ⓐ to set date.
2. Press Ⓑ to set month.
3. Press Ⓒ to set day.

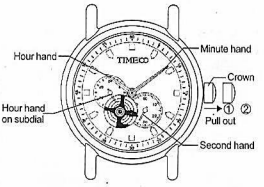


Set Time

1. Pull out the crown to the ② position.
2. Rotate the crown to set time.
   • Synchronous movement of hour hand and minute hand for 24-hour
3. Push the crown back to its original position.

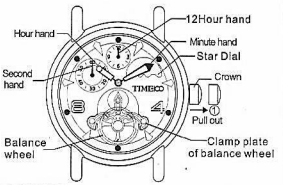


Set Time

1. Pull out the crown to the ① position.
2. Rotate the crown to set time
   • Synchronous movement of hour hand and minute hand for 24-hour
   • The Star Dial will also move at the same time.
   • Dual-time Set: First,anticlockwise rotate the crown to adjust the "12Hour hand" to the "12" position,where it will stop; Then keep rotating the crown in the same direction to adjust the time difference between "12Hour hand" and the two large hands on the big dial;At last, clockwise rotate the crown to adjust the time you want it to show.
3. Push the crown back to its original position.

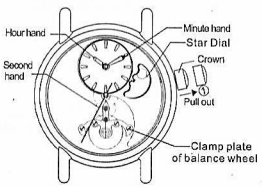


Set Time

1. Pull out the crown to the ① position.
2. Rotate the crown to set time
   • Synchronous movement of hour hand and minute hand for 24-hour
   • The Star Dial will also move at the same time.
3. Push the crown back to its original position.

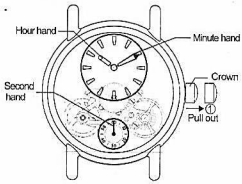

Set Time

1. Pull out the crown to the ① position.
2. Rotate the crown to set time
   • Synchronous movementof hour hand and minute hand for 24-hour
3. Push the crown back to its original position.

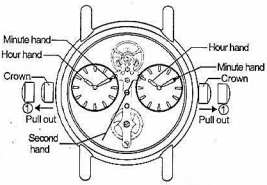

Set Time

1. Pull out the crown to the ① position.
2. Rotate the crown to set time
   • Synchronous movement of hour hand and minute hand for 24-hour
3. Push the crown back to its original position.

Advice for usage of mechanical watches:

1. Manual-wind watches should be winded once at the same time of every day to assure its normal work in the future 24 hours.
2. For self-wind watches, their power comes from the exercise of arm. So we don't have to wind under the condition of normal wear. If they can't get enough power from our exercise, then we can manually wind them and remember not to rotate the crown over 20 circles.
3. If a self-wind watch is unused for over 40 hours, then we should rotate the crown for 20 circles to restart its driving system when we wear it next time.
4. In order to prevent moisture from seeping into the watchcase and keep its water resistance, please make sure the crown keeps locked all the time.

To guarantee your watches' normal work and accuracy, we suggest you regularly maintain your watches:

1. Do water-proof test and clearance for the appearance once a year.
2. Have the whole mechanical watch maintained once every 3-5 years.
3. These can assure its good working state and extend its service life. But please note that the above maintain service only applied for watches under normal usage, not those under improper usage or frequent impact.

Tips for mechanical watches:

1. Don't adjust the date, day, moon phase during 21:00--01:00, during which calendar is working and gear desn't fit well. Frequent operation might cause damage to the inner components. These adjustments should be done at 12 o'clock(if refer to the 12 o'clock in 24-hour system. The date is jumping and the gears are at the best fit position at the very moment of 24 o'clock. The gears seperate from each other at the moment of 12 o'clock.)
2. There are two kinds of jumping forma for day. One finishs jumping in ±5 minutes, the other finishs in 3 hours.
3. Don't directly rotate the crown if it's screw-in crown. Counterclockwise rotate to unlock the crown first, then clockwise rotate and push it back when time is set, so that it can prevent moisture from entering.
If there is date display on your watch and you want to adjust it, please adjust the date one day ahead of the day you want first, and then make it jump to the right day by turning the hour hand. The date will change when hour hand goes through the 24 o'clock at midnight. This can avoid confusion between day and night caused by directly adjusting the date.
4. Don't wear mechanical watches when bathing. Makeup and hot moisture could cause damage to the waterproof membrane in the case.

Water resistance instructions

Daily water resistance ■Allowed Not allowed


Splash


Bathing in cold water


Swimming


Snorkeling


Diving


Operating crown when it's wet

30m water resistance ■Allowed Not allowed


Splash


Bathing in cold water


Swimming


Snorkeling


Diving


Operating crown when it's wet

50m water resistance ■Allowed Not allowed


Splash


Bathing in cold water


Swimming


Snorkeling


Diving


Operating crown when it's wet

100m water resistance■Allowed Not allowed


Splash


Bathing in cold water


Swimming


Snorkeling


Diving


Operating crown when it's wet

200m water resistance ■Allowed Not allowed


Splash


Bathing in cold water


Swimming


Snorkeling


Diving


Operating crown when it's wet

●All watches can't be worn to take a hot bath or sauna.

FAQs

1. Do we offer maintainance service?
All watches sold by time100 enjoy maintainance service. For more details, please refer to the "Guarantee" clause in "After-sale service" on www.time100-watch.com
2. How many free maintainance projects does time100 offer?
Time100 offers free maintaince for quality problems under proper usage, such as watches stop working due to movements problem. The following situations are not included in the free maintainance service.
A. Artificial damages (such as surface broken,watch doesn't work due to collision or impact.)
B. Under normal usage,watch gets scratched or strap gets abraded.
C. The outside parts get damaged due to accident or improper use.(such as the case,surface,glass,pointers,strap,crown etc. So please check them when you receive it and directly refuse to sign for it if there is something wrong with them.)
D. Damages caused due to not following the instruction.(like taking baths or swimming with wearing non-waterproof watches)
E. Warranty period gets expired.
For more details, please refer to the help center on www.time100-watch.com
3. What if the pointer jumps abnormally?
If the second hand of quartz watch jumps once every few seconds or stops jumping, it probably because the power of the battery is used up. Then you need to replace the battery. Don't keep dead battery in watch for a long time, which might cause damage to movement.
4. Why doesn't the screen of electronic watches display sometimes?
If there's no water entering or impact problem,it most likely because the battery has gone dead, in which case it can get right by replacing its battery.
5. Can customers replace battery for the watch by themselves?
The accurancy and water resistante are very important to increase the service life of the battery. Replacing battery by non-professional customers is not adviced.
6. Is it possible for all-steel straps to rust or fade?
There are various stainless steel. The main ingredients of them are nickel and chromium, which can be corroded by strong acids and alkali. There is hydrochloric acid in our sweat which can corrode watches. Nickel and chromium can also have chemical reaction with vinegar, bleacher, and some other chemicals,makeups. We can clean the strap with soft bristle toothbrush dipping in professional detergent and then dry it with soft fabric. We can also take it to professional maintainance center.
7. What can be done if water vapor appears in the inside of watch glass?
Water might enter if watch lacks of maintainance in water resistance or be used beyond its water resistance, in which case it should be immediately taken to the professional maintainance center. So that water vapor won't be confined in watch case and cause damage to the movement.
8. Why watches which can be worn in swimming can't be worn when taking bath,having hot springs,having sauna nor be put in bathroom?
The temperature in the above environments is very high,in which case the seal ring at the watch crown will expand to let water in and damage the movement. So please don't wear watches in the above environments.

Instructions for after-sale service:

In order to assure you happy shopping experience,Time100 offers you good service of "Replacing within 30 days and 1 year warranty".
Replacing in 30 days: From the day you receive the product, if there are quality problems under proper usage, you can apply for a replacement or ask for refund within 30 days.
1 year warranty: Within the one year warranty period, if the products have non-artificial quality problems under proper usage,time100 offers you free maintainance and repairment. If the problem is caused by improper use, we can offer you life-long repairment at the lowest charge on repairment cost.
For more details about the rule and process of after-sale service, please refer to the help center on www.time100-watch.com
Customer service email address: service@time100-watch.com

Time100. Make Your Hands Shining!

Certificate

IQC Qualified

Product standard: GB/T 6044-2005 Analog-type quartz crystal watch
GB/T 1249-2004 Mechanical watch

Beijing time100 electronic commerce co.,LTD
Add:51 Shi Nan Road, Panyu District, Guangzhou City, China
Http:www.time100-watch.com